
calibration.log

The file is automatically written during calibration with information on simulation progress unless turned off in [optpar.txt](#). It is not used for all calibration methods though. The file usually begins with some information on the calibration settings to be followed by intermediate parameter and criteria values.

The file is written to the [resultdir](#) folder.