## ForcKey.txt/ForcKey\_nnn.txt

In the basic case, forcing data time series are given for each subbasin. It is possible to use one time series of forcing to represent the conditions for several subbasins. In this case the forcing data time series are given an identification (obsid) separate from the subid. The ForcKey-file gives the coupling between subbasins and forcing data. It can also hold information about elevation for temperature observations (Tobs.txt) that will be used for temperature corrections with parameter tcobselev.

The file is optional and located in the forcingdir folder given in info.txt. You can use code readobsid in info.txt to use this file, but default is to use the file so it is not necessary to set the flag. Turning off readobsid will force HYPE not to read and use an existing ForcKey.txt file.

The file has column headings on first row, and data from second and onward. The number of data rows is assumed to be the same as in GeoData.txt. Missing values are not allow (program won't check!). Columns with unknown column headings are skipped while reading the file and can be used for comments. Such columns must not contain more than 100 characters.

Column	Format	Description
subid	integer	id number for subbasins (mandatory)
pobsid	integer	id number for precipitation data (<10000000)
tobsid	integer	id number for air temperature data (<10000000)
tobselev	real	elevation of temperature observation in meter
sfobsid	integer	id number for snowfall data (<10000000)
swobsid	integer	id number for shortwave radiation data (<10000000)
uobsid	integer	id number for wind speed data (<10000000)
rhobsid	integer	id number for relative humidity data (<10000000)
tminobsid	integer	id number for minimum air temperature data (<10000000)
tmaxobsid	integer	id number for maximum air temperature data (<100000000)

ForcKey\_nnn.txt holds information on forcing data - subbasin coupling for data of sequence with seqnr nnn. For seqnr 0 is ForcKey.txt used.