

# info.txt

## General

The *info.txt* file contains model options and simulation settings. The purpose of the file is to govern the simulation. It works as the user interface for a HYPE model run. The basic format in the info file is simply a row-wise code-argument(s) combination:

```
!! <comment>
<code 1.1> [<code 1.2>] <argument 1> [<argument 2>] ... [<argument n>]
<code 2.1> [<code 2.2>] <argument 1> [<argument 2>] ... [<argument m>]
...
```

Comment rows can be added anywhere and are marked with double exclamation marks, i.e. `!!`, or `!!!` followed by a space. For other rows, the first (and sometimes second) code string decides what information is to be read. The code can be written within or without apostrophes ('...'). Most codes are optional and can be omitted if not required in a model run. Codes are not case sensitive, except for directory paths given after codes *modeldir*, *forcingdir* and *resultdir*, and time steps given after code *steplength*. Date-times are always specified as the beginning of the timestep. Maximum 18000 characters can be read on a single line.

A typical info file contains four groups of code-argument combinations:

1. Model options, e.g. specification of time stepping, choice of optional modules, etc.
2. Output options, i.e. type of result files and output variable specification
3. Performance criteria options, i.e. specification of objective functions and criteria computation
4. Updating options, specification of optional updating of subcatchment output variables with measurements

Conventionally, info files are sorted according to this order. The following tables describe all possible codes, grouped in the above order.

In order to write output files of results for other than daily time steps or the whole simulation period, *bdate*, *cdate*, and *edate* must agree with the period chosen for output, e.g. for monthly output, *cdate* should be the first day of a calendar month and *edate* the last day of a month. This is true also for shorter time steps, e.g. *edate* should be the last timestep of the date ending the period.

**Mandatory codes** denoted in bold face.

Code	Argument	Description
<i>modeldir</i>	<i>directory path</i>	Gives the search path to all model input files, with exception of forcing data and initial state if <i>forcingdir</i> is set. Default is the same folder as <a href="#">info.txt</a> . Relative path starts from the info-file folder.
<i>forcingdir</i>	<i>directory path</i>	Gives the search path to forcing files (Pobs, Qobs etc. and ForcKey) and initial state file. Default is <i>modeldir</i> . Relative path starts from the info-file folder.

Code	Argument	Description
resultdir	directory path	Gives the search path to the result files (except for hyss.log which is written in the folder of <a href="#">info.txt</a> ). The folder must exist. Default is same folder as <a href="#">info.txt</a> . Relative path starts from the info-file folder.
bdate	date-time	Gives the start date for simulation. Format: yyyy-mm-dd [HH:MM].
cdate	date-time	Gives the start date for the output of results and calculations of criteria. Format: yyyy-mm-dd [HH:MM]. Defaults to bdate.
edate	date-time	Gives the last date for the simulation (including this date). Format: yyyy-mm-dd [HH:MM].
steplength	string	defines the length of the time step used in calculations. It consists of an integer followed directly by d, h or min. For example a daily time step is defined as <i>1d</i> , while a time step of six hours is defined as <i>6h</i> . The code has so far been tested with step lengths <i>1h</i> , <i>6h</i> and <i>1d</i> . Default is <i>1d</i> . Time steps of a simulation with shorter time step than a day use hour and minute to denote their time. The hour is between 00 and 23. The date-time is the beginning of the time step. For example with 12h time step is the 2 times during a 1 January denoted 2010-01-01 00:00 and 2010-01-01 12:00.
instate	Y/N	defines whether a starting state is to be read. <i>Y</i> for yes, <i>N</i> for no. Default is <i>N</i> . For yes, the file with a previously saved model state must exist (state_saveyyyymmdd[HHMM].txt) date in file name must be the same as bdate.
outstatedate	date-time	defines that a starting state will be output for the given date. The date should be in the format yyyy-mm-dd [HH:MM]. The starting state is saved in the file state_saveyyyymmdd[HHMM].txt. The default is that no output state is written. Maximum 10 starting states (10 dates) may be written. The dates may be written on same or different rows. In the latter case with this code on every row.
substance	string	gives the substances to be simulated. One or several of: <i>N P C S T1 T2</i> . <i>N</i> - nitrogen, <i>P</i> - phosphorus, <i>C</i> - organic carbon, <i>S</i> - sediment, <i>T1</i> - tracers, and <i>T2</i> - water temperature. Substances may be defined on one or several rows (with the code preceding the substance on each row) with one or several substances per row (separated by space). The default is to simulate no substances, only water.
calibration	Y/N	defines whether or not automatic calibration is to be done. <i>Y</i> for calibration. Default is <i>N</i> . Calibration method and parameters are defined in file <a href="#">optpar.txt</a> . Note that reading of initial state does not work with automatic calibration of parameters rivvel and damp, or with the <code>soilstretch</code> functionality.
regestimate	Y/N	defines if regional estimated parameters calculated by regression is used. This option requires the files <a href="#">reg_par.txt</a> , <a href="#">CatchDes.txt</a> and <a href="#">CatchGroup.txt</a> . <i>Y</i> for yes or <i>N</i> for no. Default is <i>N</i> .
readformat	0/1	handles several different formats of input data. The default (0) is ASCII-files with dates in the format yyyy-mm-dd and normal months. '1' is ASCII-files with date in MATLAB format

Code	Argument	Description
writeformat	0/1	Set to 1 to write output in a format suitable for MATLAB (i.e. date without '-', '%' in front of the column headings). Default is 0.
readoutregion	Y/N	defines if <a href="#">Outregions.txt</a> is present and should be used. Give Y to use the file, or N (default).
resseqnr	Y/N	determines if result files have the sequence number as a suffix to their name, if HYPE is run with flag '-sequence', see <a href="#">How to run HYPE</a> . Default is yes. Give No to remove the number from result file names.
readdaily	Y/N	defines if time series input data should be read every day. The default is to read all data at the beginning of the simulation (N). However, for large input data files, memory limitations can preclude this. Set to 'Y' to read input data every day instead.
readobsid	Y/N	defines if columns pobsid/tobsid/etc. in <a href="#">ForcKey.txt</a> will be used. Give Y to use the columns if they exist (default), or N to force the use of subid as connection between forcing data columns and GeoData.
readsfobs	Y/N	defines if <a href="#">SFobs.txt</a> with observed snowfall fractions is present and should be used. Give Y to use the file, or N (default).
readswobs	Y/N	defines if <a href="#">SWobs.txt</a> with observed shortwave radiation is present and should be used. Give Y to use the file, or N (default).
readuobs	Y/N	defines if <a href="#">Uobs.txt</a> with observed wind speeds is present and should be used. Give Y to use the file, or N (default). Replaces readwind.
readrhobs	Y/N	defines if <a href="#">RHobs.txt</a> with observed relative humidity is present and should be used. Give Y to use the file, or N (default). Replaces readhumid.
readtminobs	Y/N	defines if <a href="#">TMINobs.txt</a> with observed min air temperatures are present and should be used. Give Y to use the file, or N (default). Replaces readtminmaxobs.
readtmaxobs	Y/N	defines if <a href="#">TMAXobs.txt</a> with observed max air temperatures are present and should be used. Give Y to use the file, or N (default). Replaces readtminmaxobs.
readxomsfiles	Y/N	defines if files <a href="#">XobsXOMn.txt</a> and <a href="#">XobsXOSn.txt</a> are present and should be used (n=0-9). Files hold observations of optional, not predefined variables, XOSn are summed over time in output files while XOMn are averaged. Give Y to use the file, or N (default).
submodel	Y/N	defines if only a part of the model domain is to be simulated. Give Y for yes or N for no. Default is N. The submodel is then defined in the file <a href="#">pmsf.txt</a> .
irrrunlimited	Y/N	defines if irrigation withdrawals should be taken from within the model domain (N, default) or from an unlimited outside source (Y). For further irrigation details, see <a href="#">MgmtData.txt</a>
soiliniwet	Y/N	initiates soil water to porosity instead of field capacity which is default (N). Set Y to use porosity.
soilstretch	Y/N	define if parameter <i>soilcorr</i> shall be used to stretch the soil depths given by <a href="#">GeoClass.txt</a> .

Code	Argument	Description
modeloption	<i>processmodel</i> #	takes two arguments and defines if an alternative processmodel should be used. Default is 0, alternative processmodels correspond to higher integers. For available processmodels, see below.
indatacheckonoff	0-3	defines if setup- and observation files as well as hydrological processes and model options will be checked for formal errors prior to running the model. Default is to not perform any checks (0). 1) Tests will be performed and the simulation will be aborted if errors are found. 2) Tests will be performed and the simulation will be continued regardless if errors are found. 3) Tests will be performed and simulation will be aborted regardless if errors are found or not.
indatachecklevel	0-2	Printout level for verification and validation checks: 0) only passed/failed, 1) also show which tests were performed, 2) also show parameters/inputs
usestop84	Y/N	flag to use the old return code 84 for a successful run

## Model options

The following process models are available as modeloptions. The second code and argument are given after the modeloption code word.

Code 2	Argument	Description
deepground	0/1/2	defines which model to use for regional groundwater flow and aquifers. Default is none (0), alternative is a regional groundwater flow model without dedicated aquifer volumes (subsurface transfer between subcatchments) (1) and an aquifer model with dedicated regional aquifer volumes (2) (requires aquifer definition in input file <a href="#">AquiferData.txt</a> ).
floodmodel	0/1/2/3	defines which model to use for floodplains. Default is none (0), alternatives are a simple model (1) and a model with soilroutines (2). A fourth option (3) is to use the model with soil routines and connecting floodplains. All requires floodplain information in input file <a href="#">FloodData.txt</a> .
growthstartmodel	0/1	defines if temperature varying start of the growth season should be used. Default is 0, then <a href="#">CropData.txt</a> constant parameter bd2 is used. The alternative is 1, i.e. to used varying growth season start. Then the season start is calculated based on degreedays (equation defined by parameters in <a href="#">CropData.txt</a> ).
lakeriverice	0/1/2	defines if ice on lakes and rivers should be simulated. Default is no (0), while a positive number means yes. The alternative models are (1) with temperature transfer between air and water and (2) with water surface heat balance. The ice calculations require that <i>substance</i> T2 (water temperature) is simulated.
petmodel	0/1/2/3/4/5	defines if an alternative potential evapotranspiration model should be used. Default is temperature dependence or use of observations (0), alternatives are temperature dependent (1), modified Jensen-Haise/McGuinness (2), modified Hargreaves-Samani (3), Priestly-Taylor (4), and FAO Penman-Monteith reference crop evapotranspiration (5).

Code 2	Argument	Description
snowdensity	0/1	defines which snowdensity model to use. Default is snow age dependent snowdensity (0), and alternative is snow compaction snow density model (1).
snowevaporation	0/1	defines if evaporation (sublimation) from snow and glaciers should be calculated. Default is off (0), and alternative is on (1). Snow and glacier evaporation is governed by the general parameters 'fepotsnow', 'fepotglac', and 'fsceff' in <a href="#">par.txt</a> .
snowfallmodel	0/1	defines if an alternative snowfall model should be used. Default is threshold temperature (0), alternative is snowfall fraction from <a href="#">SFobs.txt</a> (1).
snowmeltmodel	0/2	defines which snowmelt model should be used. Default is temperature index (0), the alternative is temperature and radiation index (2). Previous option (1) temperature index with snowcover scaling is no longer used. Snowcover scaling of melt and evaporation is controlled by parameter 'fsceff', see section <a href="#">par.txt</a> .
swtemperature	0/1	defines if T2 temperature should be used for WQ-processes in surface waters. Default is not (0), alternative is (1). The calculations require that <i>substance</i> T2 is simulated.
glacierini	0/1	defines if initialization from SLC+parameters overrides saved state of glacier volume (1). Default is to use saved state (0).
infiltration	0/1/2/3	defines which infiltration model should be used. Default is the basic infiltration model of HYPE. For infiltration model 1 infiltration is limited by frozen soils. Infiltration model 2 is an alternative model where infiltration and percolation is added after runoff and evaporation is calculated. Model 3 is a combination of model 2 and 1.
erosionmodel	0/1	defines which soil erosion model to be used for simulation of suspended sediments. Default (0) is similar to erosion of PP (uses CropData), alternative (1) is based on HBV-sed.
wetlandmodel	0/1	defines if wetland model is to be simulated. Default (0) is no wetland model, (1) is river wetland nutrient model.
soilleakage	0/1	defines if soil leakage concentrations is to be calculated or read from file. Default (0) is calculation, (1) is reading monthly values for each subbasin.

## Output options

HYPE offers three principal output types for standard model runs, as well as two variants, all of which are formatted text files with tabular content which is controlled with code combinations in `info.txt`. Additional output are two types of files which are activated by single codes:

- **basin outputs**, which return multiple variables for a single subcatchment in one file [XXXXXXX.txt](#) per subcatchment, where 'XXXXXXX' is the ID of the subcatchment, a number with maximum 7 digits (filled with leading zeros in case of shorter ID, e.g. [0001234.txt](#)).
- **region outputs**, similar to basin outputs (return multiple variables for a single region in one file) [XXXXXXX.txt](#), where 'XXXXXXX' is the ID of the output region (must not overlap subids).
- **time outputs**, which return single variables for all sub-catchments in one file [timeXXXX.txt](#) per variable, where 'XXXX' is the four-letter variable ID, e.g. [timeCOUT.txt](#).
- **map outputs**, which also return single variables for all sub-catchments in one file, [mapXXXX.txt](#) per variable, similar to time outputs but transposed, which makes it easier to

connect the results to sub-catchment maps/GIS layers.

- **class output**, which return multiple variables for a single subcatchment in one file or single variables for all sub-catchments in one file. The [class output](#) are thus similar to basin- and timeoutput, but the variables are for a specified group of classes. The file names has an extra suffix with the classgroup name.
- **annual loads** of nitrogen and phosphorus
- **water balances** of subbasin water stores for each time step

The principal outputs are specified with two codes in *info.txt*, first code giving the output type and second specifying content options. If output with different mean period is to be had by the same output type, it is possible to number the outputs consecutively between the two codes. After the codes follow the arguments. Content option codes are identical for all basic output types. All outputs are technically optional.

It is possible to get output for several different meanperiods for the same type of output (basin- , region- or time-output) by specifying several groups of the same type of output with a ordinal number between **Code 1** and **Code 2**. See example below the table. The files will then have a suffix to their name to separate them, e.g. *timeCRUN\_DD.txt*. If only one non-numbered group is used no meanperiod suffix will be added to the file(s). The number between **Code 1** and **Code 2** is also used to hold together classoutput information for different variables/groups/meanperiods.

Code 1	Code 2	Argument	Description
basinoutput mapoutput timeoutput regionoutput classoutput	variable	ID string(s)	defines variables to be written. Multiple variables are separated by blanks or tabs. The order of the variables defines the order in <a href="#">basin output files</a> . For <a href="#">time output files</a> and <a href="#">map output files</a> the order is irrelevant (one file per variable returned). Both internal and output variables are available, see <a href="#">Complete list of variables</a> . One or several rows may be given.
basinoutput mapoutput timeoutput regionoutput classoutput	meanperiod	0/1/2/3/4/5	is given to define the period to which results are aggregated for the output. The period is given using codes (see table below). The type of aggregation depends on variable and chosen period: Fluxes are given as sums, storages and states as averages, and concentrations as flow-weighted averages. <b>Note:</b> Period 5 aggregates are always means of annual aggregates. The type of aggregation is also documented in the <a href="#">list of variables</a> in column 'Agg.'.
basinoutput mapoutput timeoutput regionoutput classoutput	signfigures	integer	defines the number of significant figures written in the outputs. <b>Note:</b> <i>signfigures</i> applies to all output variables within one output type. Default is zero and then a fixed number of decimals are used. If set, significant figures and mathematical format are used (e.g 9.5451E-03). Maximum allowed number of significant figures is 10.



Code 1	Code 2	Argument	Description
basinoutput mapoutput timeoutoutput regionoutput classoutput	decimals	integer	defines a fixed number of decimals written in the outputs, alternative to <i>signfigures</i> . Maximum allowed number of decimals is 9. Consider using <i>signfigures</i> instead, which is more flexible. <b>Note:</b> <i>decimals</i> applies to all output variables within one output type. Output variables which contain small numbers and ones which contain large numbers can be impossible to combine in a single basinoutput combination, because a small number <i>variable</i> can require such a large number of <i>decimals</i> to give meaningful precision that the total number of digits of the large number variable exceeds HYPE's maximum output width, resulting in the printing of '*****' strings. A typical example is a combination of substance loads (kg/year) and discharge (m <sup>3</sup> /s).
basinoutput classoutput	allbasin	NONE	defines that output is to be written for all subbasins. No further arguments.
basinoutput classoutput	subbasin	integer	defines one or several SUBIDs (subcatchment IDs) for which output is to be written. One or several rows may be given.
regionoutput	outregion	integer	defines one or several OUTREGIDs for which output is to be written. One or several rows may be given. If no row with outregions is defined all outregions will be written.
classoutput	group	name string(s)	defines which class groups are to be printed for this output. Leave out if default class groups are used.
classoutput	definegroup	name string, integer(s)	defines which slc-classes are included in the classgroup with this name. The name may be up to 6 letters.
classoutput	definegroup	allclass	define default groups should be used for all classoutput. This means one class per classgroup.
printload		Y/N	defines if output of annual loads is to be written. Y for load output. Default is N.
printwaterbal		Y/N	defines if output of daily (time steply) water balance is to be written. Y for yes or N for no. Default is N.

The following example snippet give monthly time series of precipitation, evaporation, local runoff and discharge and daily time series of runoff. The additional file, in this case for daily runoff, is called *timeCRUN\_DD.txt*, while the runoff file from the first group is called *timeCRUN\_MO.txt*:

```

timeoutoutput 1 variable prec evap crun cout
timeoutoutput 1 meanperiod 3
timeoutoutput 1 decimals 3
timeoutoutput 2 variable crun
timeoutoutput 2 meanperiod 1
timeoutoutput 2 decimals 1

```

Mean period codes and corresponding file name suffix.

Code	Suffix	Description
0	TS / HR / DD	The code give timesteplly output, the suffix varies depending on time step length
1	DD	daily
2	WK	weekly
3	MO	monthly
4	YR	yearly
5	SP	simulation period
	TS	timesteplly
	HR	hourly

## Performance criteria options

HYPE can calculate several performance criteria over the model domain. HYPE allows to set several criteria which evaluate the whole model domain, e.g. an average Nash-Sutcliffe efficiency over all stations. If several of these domain-wide criteria are set in the performance criteria options they will be added, optionally with weights, to give an overall performance measure. This measure will be used as objective function in the calibration routines. Performance measure and domain-wide criteria are written to output file [simass.txt](#). Users can also access all criteria values for each subbasin (observation site at catchment outlet) seperately in output file [subassX.txt](#). Criteria are calculated for all subbasins where observation data are available. Criteria are always based on the model evaluation period as defined with codes cdate and edate, see [Model options](#).

Performance criteria are specified in *info.txt* with code `crit` or `crit n`, followed by a second code. `n` is used to number individual domain-wide performance criteria which are combined to the overall performance measure as described above. Up to 20 criteria are allowed, [a complete list of available criteria is available](#) as are [equation definitions](#). Calibration routines require further settings in additional input files, see [Calibration files](#).

For the calculation of criterion for lake water stage, the combination of variables `wcom` and `wstr` are exchanged for the internal variables `clwc` and `clws` by the program. These variables are the water stages cleaned from `w0ref` reference level ( $clwc = wcom - w0ref$ ,  $clws = wstr - w0ref$ ). This makes the criterion calculation more accurate, but note that relative criteria, e.g. relative bias, are now relative to the smaller cleaned water stage level.

Code_1	Code 2	Argument	Description
crit	meanperiod	1/2/3/4	defines the period over which the data will be accumulated (i.e. no weighting on volume for concentrations) before calculating the performance criterion, i.e. criterion will be calculated from daily, weekly, monthly or annual values. 1-daily, 2-weekly, 3-monthly, 4-annually. Default is daily.
crit	datalimit	integer	defines smallest amount of observations required for the performance criteria to be calculated. Default is 3.
crit	subbasin	integer(s)	defines one or several SUBIDs which subbasins should be included in criteria calculations (optional). If not set all are used. One or several rows may be given.
crit n	criterion	ID string	a performance criterion to be calculated. See <a href="#">List of available performance criteria</a> .
crit n	cvariable	ID string	simulated variable to calculate criterion with. See <a href="#">List of output variables</a> .



Code_1	Code 2	Argument	Description
crit n	rvariable	<i>ID string</i>	observed variable to calculate criterion with. See <a href="#">List of output variables</a> .
crit n	weight	<i>numeric</i>	weighting factor for the criteria if a combined criterion is to be calculated (should be a positive number)
crit n	parameter	<i>numeric</i>	parameter value used for RA-criteria coefficient value. See coefficient a in <a href="#">RA equation definition</a> .
crit n	conditional	<i>numeric</i>	parameter value. Only used for DEMC-calibration. The parameter value is the threshold for the criterion.
crit n	cgroup	<i>name</i>	name of the classgroup for which the simulated variable to calculate criterion with is to be taken. Note observed variables can not be specified on classgroup level. Suitable variable can be defined as e.g. xom1.

The following example snippet combines a median Kling-Gupta performance measure for daily discharges and a mean relative bias for daily total nitrogen concentration observations at stations where at least 50 observations are available during the model period:

```
crit    meanperiod 1
crit    datalimit  50
crit 1 criterion  MKG
crit 1 cvariable   cout
crit 1 rvariable   rout
crit 1 weight      0.5
crit 2 criterion  MRE
crit 2 cvariable   cctn
crit 2 rvariable   retn
crit 2 weight      0.5
```

## Updating options

HYPE allows updating of simulated discharge and lake water level with observations during model run as well as updating of nitrogen and phosphorus concentrations using correction factors in individual subbasins. Discharge can be updated directly by discharge observations, by previously saved errors of simulated discharge, or previously saved errors of simulated lake water level. An auto-regressive (AR) model is used to model the errors for the last two methods. Lake water level can be updated by water level observations, or by previously saved errors of simulated lake water level.

The updating methods are described in detail in the [tutorial](#). Some updating routines require further settings in additional input file [update.txt](#).

Code 1	Code 2	Argument	Description
update	quseobs	<i>none/keyword</i>	updating of Q. Thereafter may follow one of the two keywords: 'allstation' for updating using all Q-stations in <a href="#">Qobs.txt</a> or 'nostation' for no updating. If no keyword is given stations given in file <a href="#">update.txt</a> is updated.
update	qar	<i>none/keyword</i>	AR updating of Q on days without observed Q. Uses the switch(1/0) on column 'qarupd' in <a href="#">update.txt</a> for on/off on individual stations. Can be followed by keyword 'nostation' for no AR updating.

Code 1	Code 2	Argument	Description
update	tpcorr	<i>none</i>	updating of total phosphorus. No further keywords may be given. Which stations and how much is given in file <a href="#">update.txt</a> .
update	tploccorr	<i>none</i>	updating of local phosphorus. No further keywords may be given. Which stations and how much is given in file <a href="#">update.txt</a> .
update	tncorr	<i>none</i>	updating of total nitrogen. No further keywords may be given. Which stations and how much is given in file <a href="#">update.txt</a> .
update	tnloccorr	<i>none</i>	updating of local nitrogen. No further keywords may be given. Which stations and how much is given in file <a href="#">update.txt</a> .
update	wendupd wstr	<i>none/keyword</i>	updating of lake water levels from W observations. Thereafter there may follow one of the two keywords: 'allstation' for updating using all W-stations in <a href="#">Xobs.txt</a> or 'nostation' for no updating.
update	war wstr	<i>none/keyword</i>	AR updating of lake water level used to calculate Q. The lake water state variable is not updated. Uses the switch(1/0) on column 'warupd' in <a href="#">update.txt</a> for on/off on individual stations. Can be followed by keyword 'nostation' for no AR updating