
pmsf.txt

The file is located in the same folder as [info.txt](#). This file includes the subbasins to be calculated if only part of the model domain is required. Note that all subbasins upstream also must be included in the file.

In the first row should be given how many subbasins to be calculated (i.e. how many subid to be read from file). In, the second and following rows give the subid for the subbasins to be calculated (a selection of those in [GeoData.txt](#)).

Simulation of a part of the model domain with pmsf.txt (submodel y in [info.txt](#)) can not be used together with calibration.