

---

===== TMAXobs.txt ====='

The file is located in the modeldir folder. Maximum air temperature is given for all time steps. No missing values may exist (program won't check!) The first row includes a text string (e.g. 'date', no spaces allowed) and then a station id. This may be subid or tmaxobsid from GeoData.txt. The first column is date in the format yyyy-mm-dd [HH:MM]. If set in info that matlab-format should be read (readformat 1) the date format is yyymmdd. The second to last columns are temperature for all stations/subbasins. The order must not be same as in GeoData.txt. If tmaxobsid is used, several subbasins may use the same station. The TMAXobs-file is read only if so set in info.txt.