

TMAXobs.txt

The file is located in the `modeldir` folder. Maximum air temperature is given for all time steps. No missing values may exist (program won't check!) The first row includes a text string (e.g. date, no spaces allowed) and then a station id. This may be `subid` or `tmaxobsid` from [GeoData.txt](#). The first column is date in the format `yyyy-mm-dd [HH:MM]`. If set in `info` that matlab-format should be read (`readformat 1`) the date format is `yyyymmdd`. The second to last columns are temperature for all stations/subbasins. The order of subbasins does not have to be same as in `GeoData.txt`. If `tmaxobsid` is used, several subbasins may use the same station. The *TMAXobs-file* is read only if so set in [info.txt](#).