XobsXOMn.txt

The files are located in the modeldir folder. A variable of user choice is given for all time steps. Maximum 10 variables/files may be used. The variable is called xom0-xom9. The variable can be used for criterion calculation and is averaged over meanperiod. The first row includes a text string (e.g. date, no spaces allowed) and then subbasin id (subid). The first column is date in the format yyyymm-dd. If set in info that matlab-format should be read (readformat 1) the date format is yyyymmdd. The second to last columns are data values for all or selected subbasins. The order of subbasins does not have to be same as in GeoData.txt. The file is read only if so set in info.txt.